



# Vulcan 500c

## Vulcan 500c

Vulcan 1200e

Vulcan 1600e

## The Compact Laser Cleaning Solution

The Vulcan 500c system is a 500W pulsed fiber laser, paired with a robust galvanometer based, ergonomic hand-held, compact scan head. With flexible operational parameters, fiber laser reliability and high pulse energy, Vulcan 500c offers the best value in laser cleaning. The unique hand-held galvanometer based scan head is an integral part of the package. The Vulcan 500c offers state of the art universal control systems and simple synchronization that will deliver faster processing and unlock the highest potential of laser based paint and coating removal and surface preparation.



### Features

- 500W Compact Cleaning System
- Pulse Energy Up To 50 mJ
- Simple Touchscreen User Interface
- Optional Integrated Fume Extractor
- Adjustable Scan Speed and Scan Width
- Adjustable Spot Size with Additional Lenses
- Replaceable Cover Window
- Edge Blanking
- 200V Single Phase

### Applications

- Paint and Coating Removal
- Rust Removal
- Surface Activation
- Oxidation Removal
- Pre-Weld Preparation
- Surface Cleaning and Restoration
- Mold Cleaning



## Typical Laser Performance

**Vulcan 500c**

Vulcan 1200e

Vulcan 1600e

Average Power (W)	500
Maximum Pulse Energy (mJ)	50
Pulse Duration (ns)	70 - 500 (adjustable)
Center Wavelength (nm)	1064
Fibre Length (m)	10

## Handheld Scanner


Minimum Spot Diameter (mm, 1/e2)	> 0.7
Scan Rate (m/sec)	Max. 10
Scan Width (mm)	Max. 75

## Facility Requirements

Supply Voltage	200-240 VAC, single-phase
Supply Frequency	50 or 60 Hz
Nominal Power Consumption	4 kVA
Environmental Conditions	Temp 15 - 35°C air cooled

All specifications are preliminary and subject to change without notice

## Dimensions

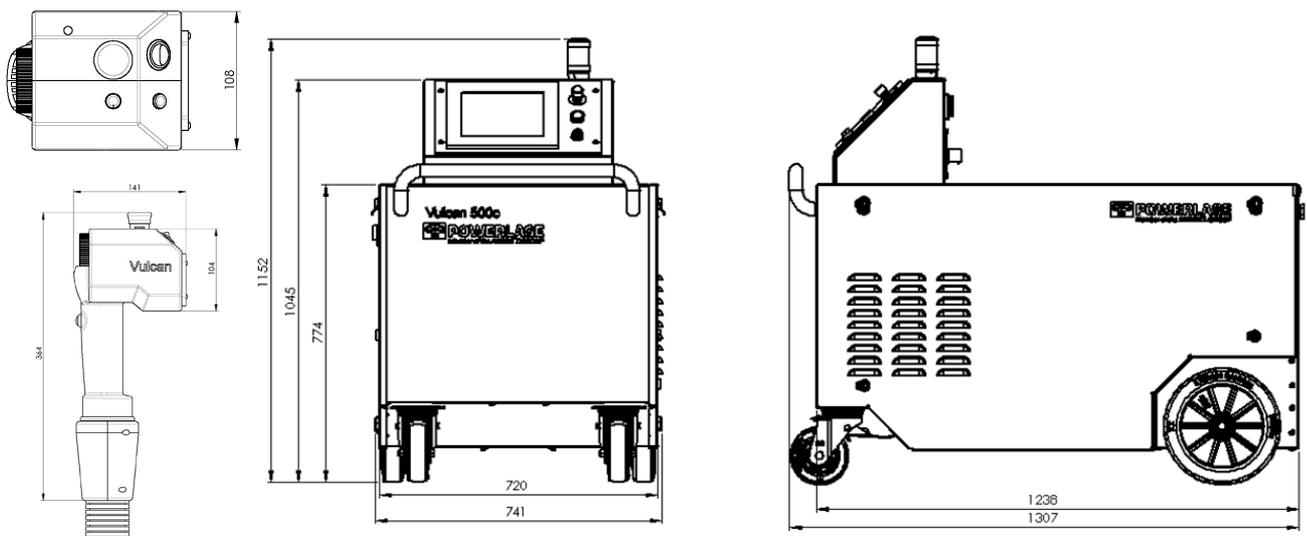

**LASER RADIATION**  
AVOID EYE OR SKIN EXPOSURE TO  
DIRECT OR SCATTERED RADIATION  
CLASS 4 LASER PRODUCT

ANDRITZ Powerlase Ltd may make improvements and/or changes in the products described herein at any time without notice.

Doc No: 069-0073-5